3. Field-supplied parts/Required tools

(1) Field-supplied parts

The following parts are field-supplied parts.

Parts name	Qty.	Notes
Double switch box	1	Not required for direct wall installation
Thin metal conduit	Necessary	
Lock nut and bushing	Necessary	
Cable cover	Necessary	Required for routing remote controller cable along a wall
Putty	Reasonable	
Molly anchor	Necessary	
Remote controller cable (Use a 0.3 mm² (AWG22) 2-core sheathed cable.)	Necessary	

(2) Field-supplied tools

- Flat-tip screwdriver (Width: 4-7 mm (5/32-9/32 inch))
 Knife or Nipper
- Miscellaneous tools

4. Selecting an installation site

This remote controller is for the wall installation. It can be installed either in the switch box or directly on the wall. When performing direct wall installation, wires can be thread through either back or top of the remote controller.

(1) Selecting an installation site

To prevent injury, install the controller on a flat surface strong enough to support its weight.

Important

To reduce the risk of shorting, current leakage, electric shock, malfunctions, smoke, or fire, do not install the controller in a place exposed to water or in a condensing environment.

To reduce the risk of malfunctions and damage to the controller, avoid installing the remote controller on an electrically conductive surface, such as an unpainted metal sheet.

To avoid deformation and malfunction, do not install the remote controller in direct sunlight or where the ambient temperature may exceed $40^{\circ}\text{C}~(104^{\circ}\text{F})~\text{or}$ drop below $0^{\circ}\text{C}~(32^{\circ}\text{F}).$

Do not install in the highly humid place such as inside the shower room etc. The relative humidity range shall be 30% to 90% without condensation.

(2) Installation space

Leave a space around the remote controller as shown in the figure at right, regardless of whether the controller is installed in the switch box or directly on the wall. Removing the remote controller will not be easy with insufficient space.

Also, leave an operating space in front of the remote controller.

30 (1-3/16) Minimum required space around the remote controller 120 (4-3/4) **®**⊙⊘ ٥ 120 (4-3/4) 120 (4-3/4)

unit: mm(in)

External dimensions of remote controller

Eng-4