

 
INSTALL OUTDOOR UNIT

 


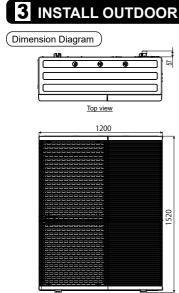

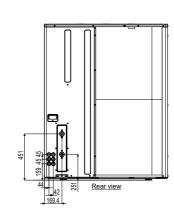




Front view



It is advisable to avoid more than 2 blockage directions. For better ventilation and multiple outdoor installations, consult an authorised dealer/ expert.

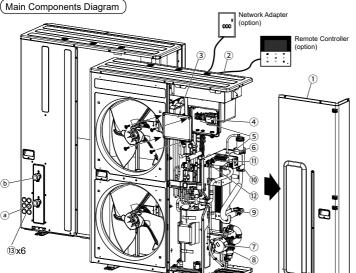

- 1 Front plate
- 2 Top plate
- 3 Terminal board cover
- 4 3-phase RCCB/ ELCB
- ⑤ Optional terminal board
- 6 Indoor/outdoor connecting terminal
- Water pump
- 8 Magnetic water filter
- 9 Flow sensor
- (i) Gas-liquid separator
- 1) Water pressure sensor (back side board)
- (1) Pressure relief valve
- (3) Connecting Cable Hole

	Tube Connector	Function
		Connector size
	(a)	Zone 1 Water Inlet (From Space Heating/Cooling)
		R 11/4"
	Ь	Zone 1 Water Outlet (To Space Heating/Cooling)
		R 11/4"