

# 1. Product specification


## 1-2. External dimensions

ECOV-X15VA(-BS)

ECOV-X-VA


### 1. Service space

The dimensions of the chart below are necessary in the service space.

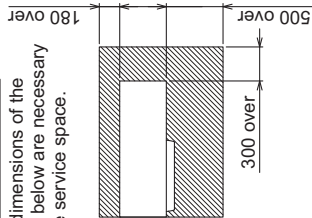





### 2. Installation bolt

Please fix four places of fixed feet of the unit with an installation bolt of M12 strongly. (Installation bolt, Washer, Nut are field-supplied.)

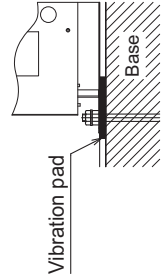

### 3. Taking the hot gas out

When removing the hot gas pipe, remove the brazed part as shown in the figure below, cut the straight part with a pipe cutter, and then take the hot gas out using the field-supplied elbow as shown in the figure below.

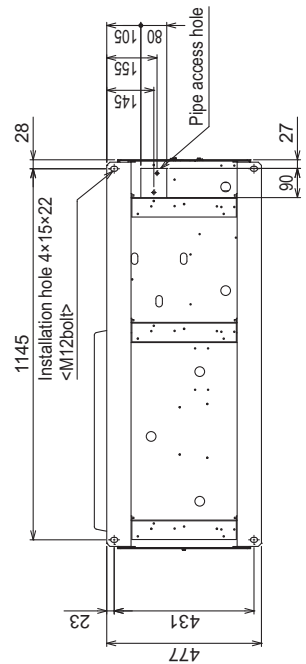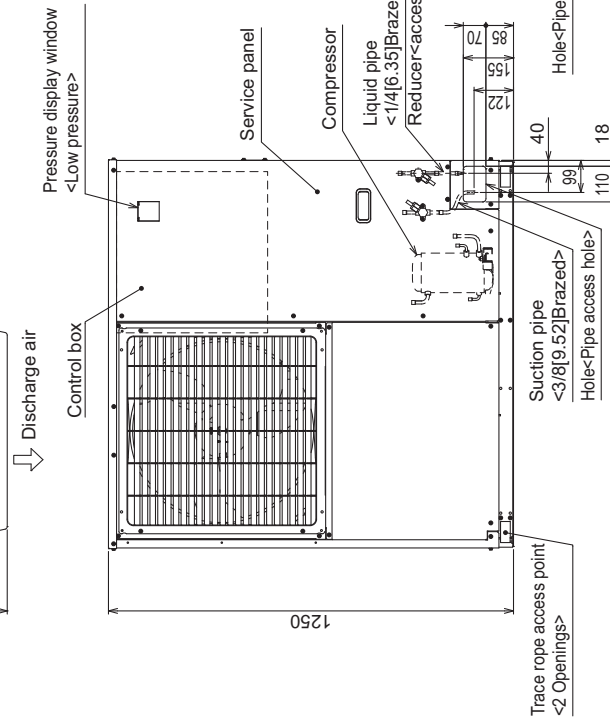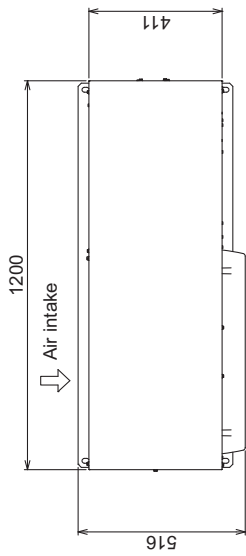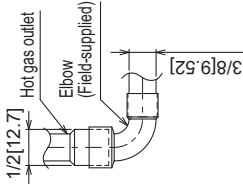


Note: Specifications are subject to change without notice.

# 1. Product specification

## 1-2. External dimensions


ECOV-X37, 55VA (-BS)

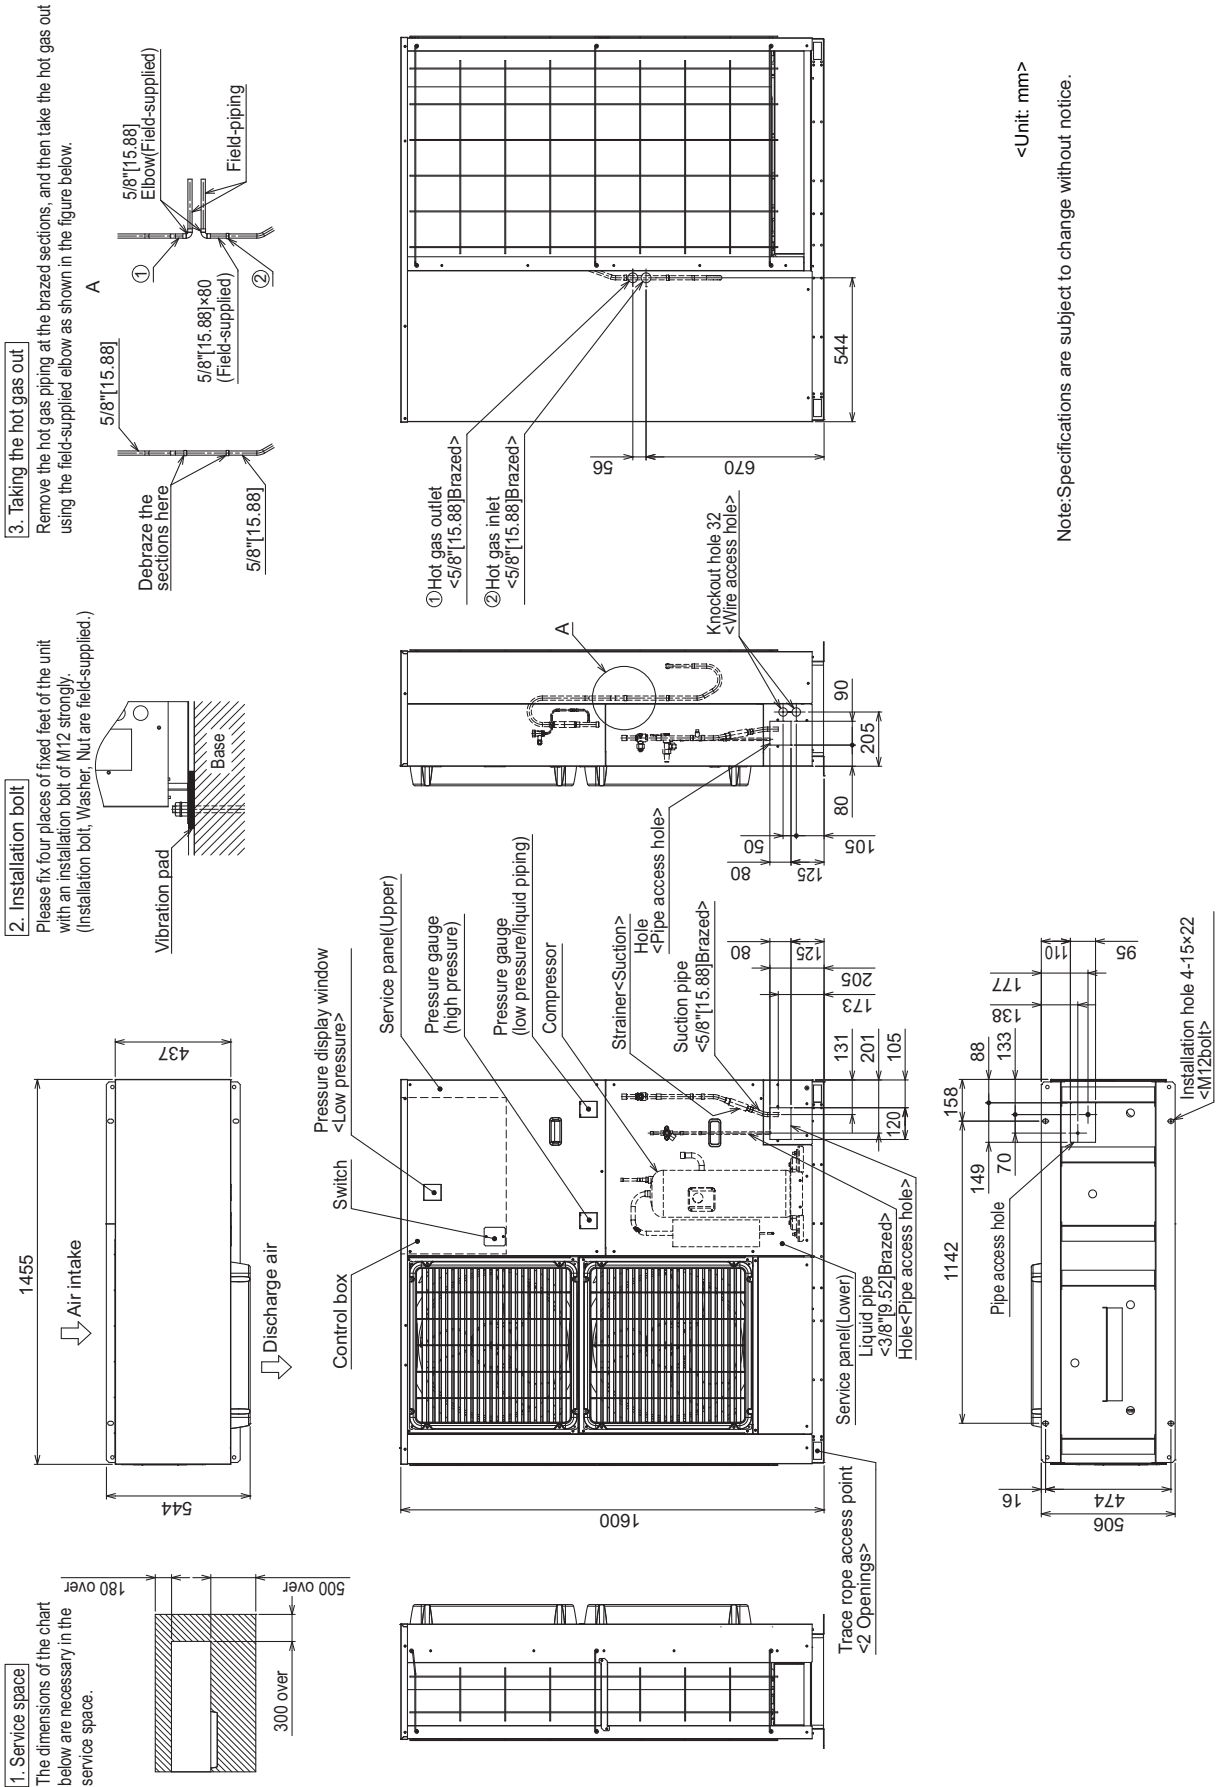

# 1. Product specification

## 1-2. External dimensions

ECOV-X37, 55VA (-BS)

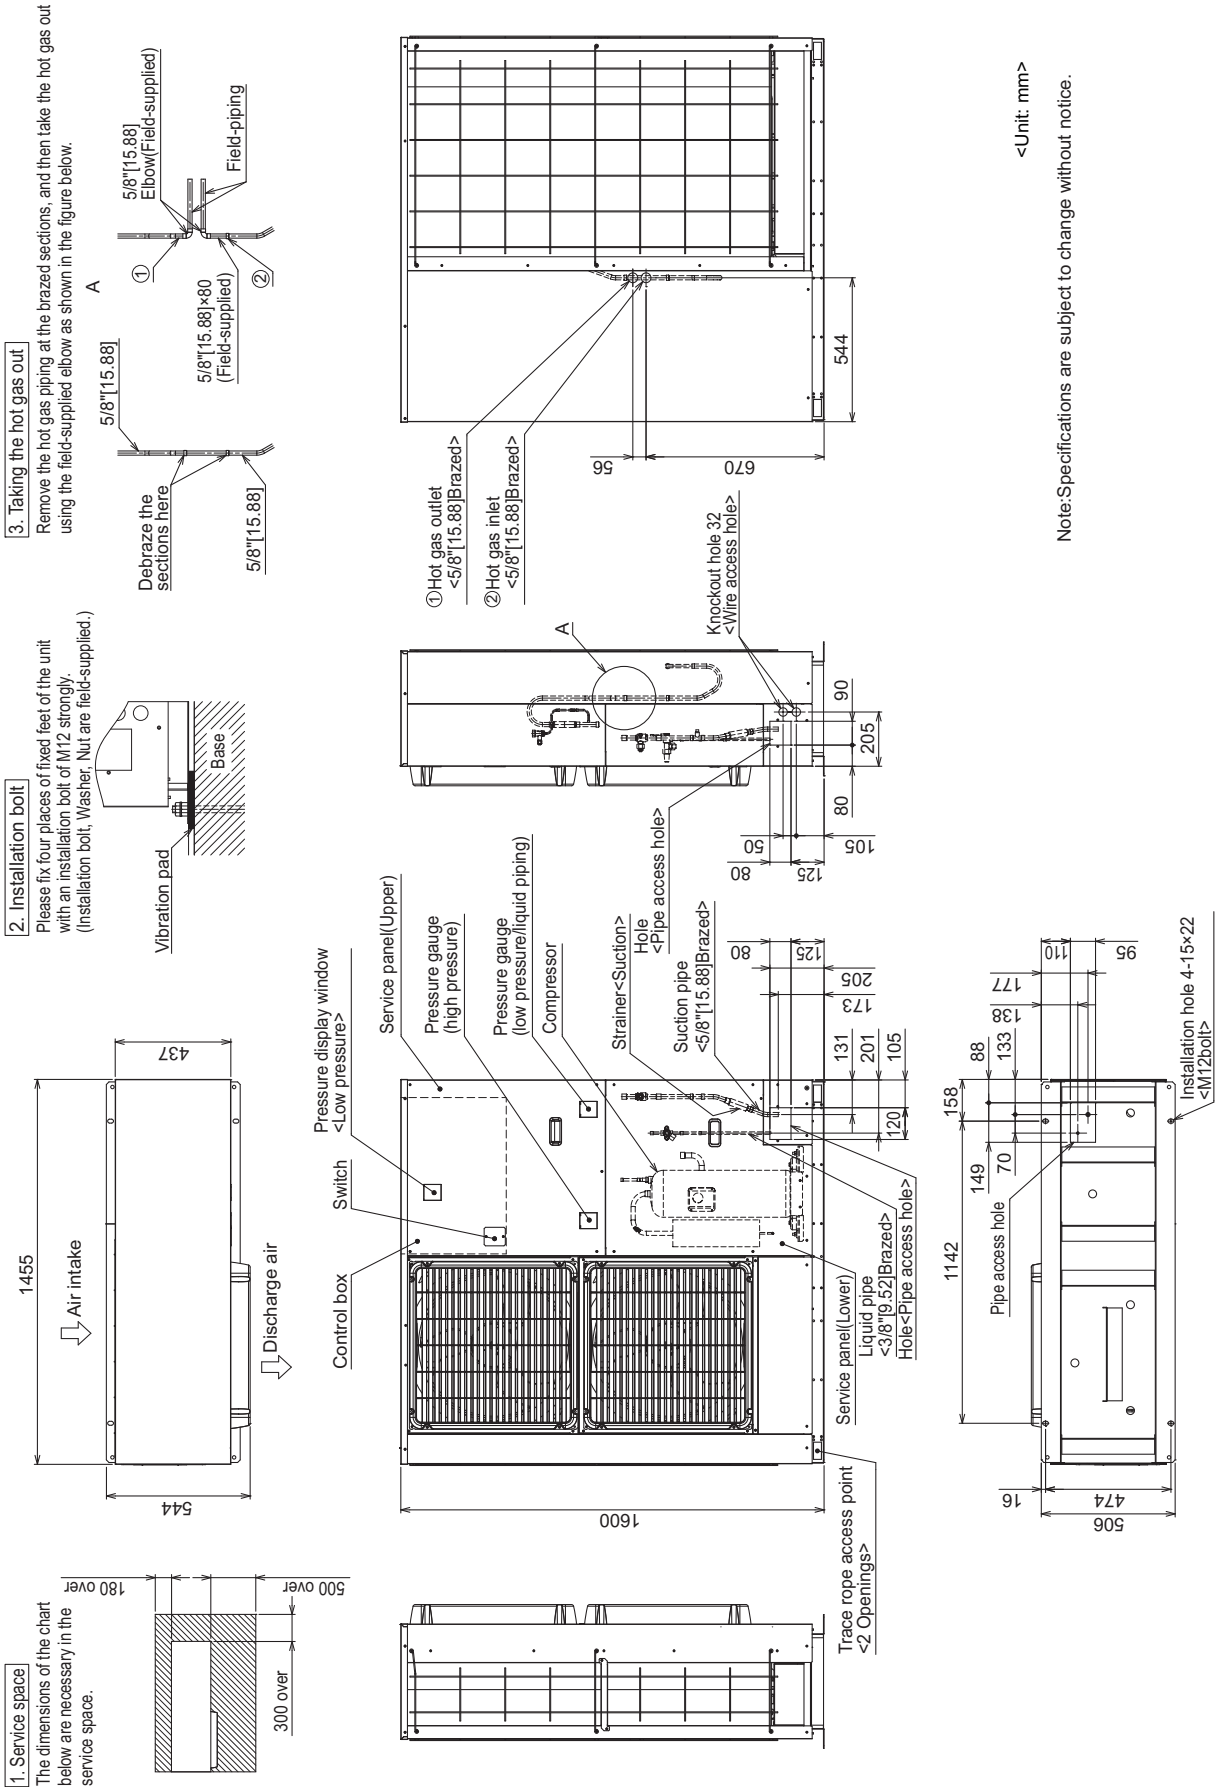

<Unit: mm>  
Note: Specifications are subject to change without notice.